91-2-T38


24 VDC, 22 pnp/npn digital inputs, 2 high-speed counter/shaft encoder inputs, 16 transistor outputs, I/O expansion port, RS232/RS485 port

| Power supply | 24VDC |
|----------------------------------|-------------------------------------|
| Permissible range | 20.4VDC to 28.8VDC with less |
| | than 10% ripple |
| Maximum current consumption | 80mA@24VDC (pnp inputs) |
| | 260mA@24VDC (npn inputs) |
| | |
| Digital inputs | 22 pnp (source) or npn (sink) |
| | inputs. See Note 1. |
| Nominal input voltage | 24VDC. See Note 2. |
| Input voltages for pnp (source): | 0-5VDC for Logic '0' |
| | 17-28.8VDC for Logic '1' |
| Input voltages for npn (sink): | 17-28.8VDC/<2mA for Logic '0' |
| , , | 0-5VDC/>6mA for Logic '1' |
| Input current | 8mA@24VDC |
| Input impedance | 3ΚΩ |
| Response time | 10mS typical |
| (except high-speed inputs) | |
| Galvanic isolation | None |
| Input cable length | Up to 100 meters, unshielded |
| | |
| High-speed counter | Specifications below apply when |
| | inputs are wired for use as a high- |
| | speed counter input/shaft |
| | encoder. See Notes 3 and 4. |
| Resolution | 16-bit |
| Input freq. | 10kHz max. |
| | |


40µs

Power supply, pnp (source) inputs


Minimum pulse

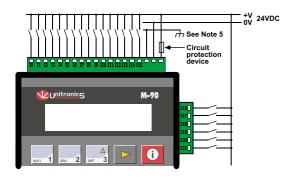


npn (sink) inputs

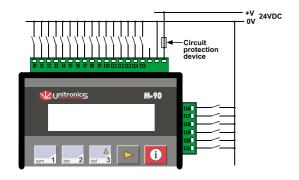


pnp (source) high-speed counter

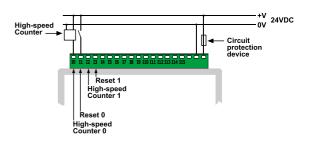

npn (sink) high-speed counter

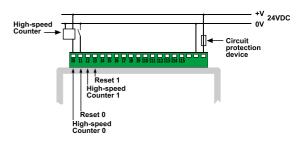

Shaft encoder

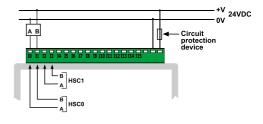

Notes:

- 1. All 22 inputs can be set to pnp (source) or npn (sink) via a single jumper and appropriate wiring.
- 2. npn (sink) inputs use voltage supplied from the controller's power supply.
- 3. Inputs #0 and #2 can each function as either high-speed counter or as part of a shaft encoder. In each case, high-speed input specifications apply. When used as a normal digital input, normal input specifications apply.
- 4. Inputs #1 and #3 can each function as either counter reset, or as a normal digital input; in either case, specifications are those of a normal digital input. These inputs may also be used as part of a shaft encoder. In this case, high-speed input specifications apply.
- 5. To avoid electromagnetic interference, mount the controller in a metal panel/cabinet and earth the power supply. Earth the power supply signal to the metal using a wire whose length does not exceed 10cm. If your conditions do not permit this, do not earth the power supply.



- Unused pins should not be connected. Ignoring this directive may damage the controller.
- Improper use of this product may severely damage the controller.
- Refer to the controller's User Guide regarding wiring considerations.
- Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.




| Digital outputs | 16 pnp (source) outputs | |
|-----------------------------------|-------------------------|--|
| Output type | P-MOSFET (open drain) | |
| Isolation | None | |
| Output current | 0.5A max. | |
| | Total current: 4A max. | |
| Max. frequency for normal outputs | 50Hz (resistive load) | |
| | 0.5Hz (inductive load) | |
| High speed output maximum | 2kHz (resistive load) | |
| frequency | See Note. | |
| Short circuit protection | Yes | |
| Short indication | by software | |
| On voltage drop | 0.5VDC maximum | |
| Power supply for outputs | | |
| Operating voltage | 20.4 to 28.8VDC | |
| Nominal operating voltage | 24VDC | |

Note:

Output #0 and Output #1 may be used as high-speed outputs.

Transistor outputs

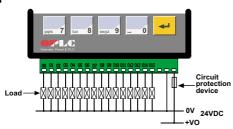

| Display | STN, LCD display |
|------------------------------|-------------------------------------|
| Illumination | LED yellow-green backlight |
| Display size | 2 lines, 16 characters long |
| Character size | 5 x 8 matrix, 2.95 x 5.55mm |
| | · |
| Keypad | Sealed membrane |
| Number of keys | 15 |
| | |
| PLC program | |
| Ladder Code Memory (virtual) | 36K |
| Memory Bits (coils) | 256 |
| Memory Integers (Registers) | 256 |
| Timers | 64 |
| Execution time | 12µsec. for bit operations |
| Database | 1024 integers (indirect access) |
| HMI displays | 80 user-designed displays |
| HMI variables | 64 HMI variables are available to |
| | conditionally display and modify |
| | text, numbers, dates, times & timer |
| | values. The user can also create |
| | a list of up to 120 variable |
| | text displays, totaling up to 2K. |

| RS232/RS485 serial port | Used for: |
|-------------------------|--|
| | Application Download/Upload Application Testing (Debug) mode Connect to GSM or standard telephone modem: Send/receive SMS messages Remote access programming RS485 Networking |
| RS232 (see note) | 1 port |
| Galvanic isolation | None |
| Voltage limits | ±20V |
| RS485 (see note) | 1 port |
| Input voltage | -7 to +12V differential max. |
| Cable type | Shielded twisted pair, in compliance with EIA RS485 |
| Galvanic isolation | None |
| Baud rate | 110 – 57600 bps |
| Nodes | Up to 32 |

Note: RS232/RS485 is determined by jumper settings and wiring as described in the document "M91 RS485 Port Settings" packaged with the controller.

| I/O expansion port | Up to 64 additional I/Os, including digital & analog I/Os, RTD and more. |
|-------------------------|--|
| Miscellaneous | |
| Clock (RTC) | Date and time-year 2000 compliant. |
| Battery back-up | 7 years typical battery back-up for RTC and system data. |
| Weight | 270g (9.52 oz.) |
| Operational temperature | 0 to 50°C (32 to 122°F) |
| Storage temperature | -20 to 60°C (-4 to 140°F) |
| Relative Humidity (RH) | 5% to 95% (non-condensing) |
| Mounting method | DIN-rail mounted (IP20/NEMA1) |
| | Panel mounted (IP65/NEMA4X) |





The tables below show how to set a specific jumper to change the functionality of the inputs. To open the controller and access the jumpers, refer to the directions at the end of these specifications.


Important:

Incompatible jumper settings and wiring connections may severely damage the controller.


Input type (for all digital inputs)

| To use as | |
|---------------|---|
| pnp (source)* | Α |
| npn (sink) | В |

*Default factory setting

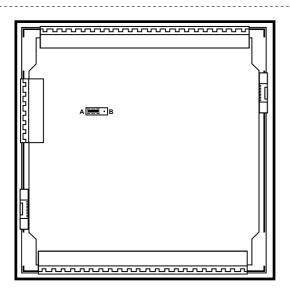

In this figure, the jumper settings will cause the inputs to function as pnp.

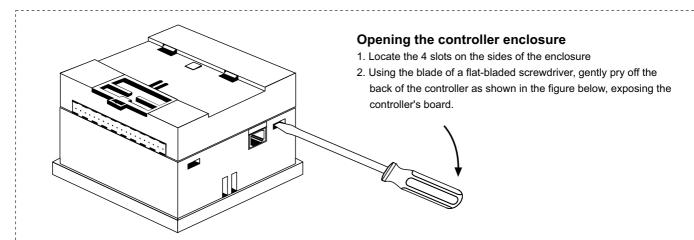

Unitronics reserves the right to revise this publication from time to time and to amend its contents and related hardware and software at any time

Technical updates (if any) may be included in subsequent editions (if any). Unitronics product sold hereunder can be used with certain products of other manufacturers at the user's sole responsibility.

